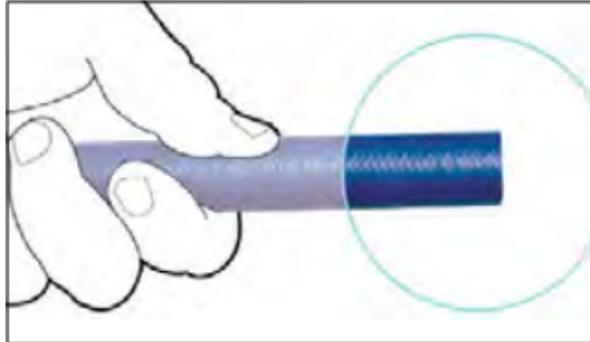
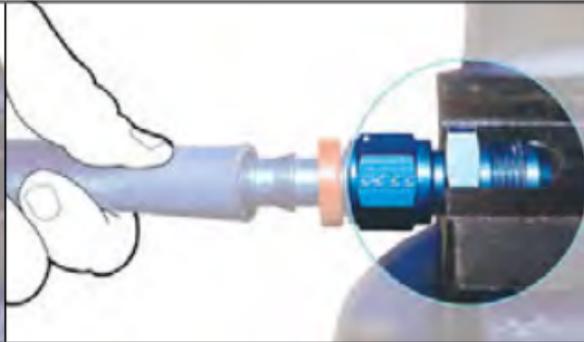


Assembly Instructions for TF-TU25 & 536 Hose & Push Fit Fittings

| | | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  |  |  |
| STEP 1 | STEP 2 | STEP 3 | STEP 4 |
| <p>Cut hose at the required length using a fine tooth saw blade or cut off wheel. Clean any loose debris from both the cut ends and inside the hose.</p> | <p>Hold the fitting in a bench vice, lubricate the fitting tail and inside the hose. (to make for easier fitting gently heat the hose with a hot air gun).</p> | <p>Push the hose over the fitting tail until it is tight behind the red hose finisher.</p>  | <p>Please Note: Straight female fittings require the use of a male adaptor during hose assembly to stop the fitting tail turning.</p> |